



# **EPO-3/9 PROOFER OVEN**



For information or technical assistance, call:

**TOLL FREE**

1(800) 735-DUKE (3853)

or

1(314) 231-1130

THIS PAGE INTENTIONALLY LEFT BLANK

**TABLE OF CONTENTS**

|  |           |
|--|-----------|
| <b>MANUFACTURER'S INTRODUCTION .....</b>               | <b>4</b>  |
| <b>INSTALLATION .....</b>                              | <b>5</b>  |
| <b>PHASE CHANGE WIRE DIAGRAMS .....</b>                | <b>7</b>  |
| <b>DOOR ADJUSTMENTS &amp; GASKET MAINTENANCE .....</b> | <b>8</b>  |
| REVERSING OVEN DOOR SWING DIRECTION .....              | 8         |
| PROOFER DRIP CHANNEL REVERSAL .....                    | 9         |
| DOOR GASKET LEAK ADJUSTMENTS .....                     | 10        |
| GASKET REPLACEMENT .....                               | 11        |
| <b>OPERATING INSTRUCTIONS .....</b>                    | <b>12</b> |
| PROOFER OPERATION .....                                | 12        |
| OVEN OPERATION .....                                   | 14        |
| OVEN AND PROOFER TEMPERATURE CHECK .....               | 15        |
| <b>OVEN AND PROOFER TROUBLESHOOTING .....</b>          | <b>16</b> |
| <b>CLEANING AND MAINTENANCE .....</b>                  | <b>18</b> |
| <b>ELECTRICAL SCHEMATICS .....</b>                     | <b>19</b> |
| <b>REPLACEMENT PARTS .....</b>                         | <b>21</b> |



## Manufacturer's Introduction

The Duke EPO-3/9 Proofer Oven was developed in response to the Food Service Industry's need for uniform baking capabilities and to provide consistently high, "just baked" bread quality.

The Duke Proofer Oven utilizes Duke's unique directional convection airflow technology that provides even heat distribution and a uniform bake without the need for turning pans during the bake cycle. This enhances the quality and consistency of the baked products while reducing food scrap/waste and simplifying operating procedures.

The low profile oven will easily roll through a standard height door. The oven and proofer doors are field reversible with a drip channel on the proofer door to prevent water from dripping on the floor.

Full width doors on the oven and proofer help to display and merchandise fresh baked bread to the customer.

The controls are simple to operate, there are two timers for independent timing of the proofer and oven.

The full width oven and proofer cavity will accept standard 1/2 size or full size sheet pans.

The Duke EPO 3/9 Proofer Oven has a 90-day labor and 1- year parts warranty.

Supplier Name: Duke Manufacturing Co.  
Address: 2305 North Broadway  
St. Louis, MO 63102

Model #: EPO-3/9  
Serial #: \_\_\_\_\_  
Date Received: \_\_\_\_\_  
Date Installed: \_\_\_\_\_  
Toll Free Telephone: 1-800-735-3853  
Fax: 1-314-231-5074  
Service Referral #: \_\_\_\_\_  
Local Service Name: \_\_\_\_\_  
Local Service #: \_\_\_\_\_

### General Specifications

Model #: EPO-3/9

Overall Dimensions  
Height: 77 3/4 in./197.5cm  
Width: 37 1/4 in./94.6cm  
Depth: 27 1/4 in./69.2cm

### ELECTRICAL SPECIFICATIONS

|         | 208 V<br>AMPS | 240 V<br>AMPS | TOTAL<br>WATTS |
|---------|---------------|---------------|----------------|
| 1 PHASE | 32.0          | 27.8          | 6650           |
| 3 PHASE | 18.5          | 16.0          | 6650           |

Shipping Weight: 550lbs / 250kg

### Installation Requirements

Power Connection:  
1 PHASE: 8 AWG COPPER WIRE  
3 PHASE: 10 AWG COPPER WIRE  
NO ALUMINUM WIRING ALLOWED

### **!CAUTION!**

All electrical connections must be in compliance with the National Electric Code, ANSI/NFPA 70-current edition or in Canada, CSA std. C22.1. and local code requirements. The circuit must be properly grounded according to the codes.



## INSTALLATION

Inspect the exterior of the shipping container carefully and note any damage on the delivery receipt. Remove the shipping container and check for damage to the oven. If there is any damage file a freight claim with the carrier and call Duke at 800-735-3853.

Compare the voltage and phase from the oven specification label to the power supply for the oven and call Duke if there is a difference. If the phase is wrong, a qualified service technician can change the wire connections inside the oven to correct the problem. See the illustration on page 4 for phase conversions. If the voltage is wrong, the heat elements must be changed. Call Duke to get new elements.



### WARNING

### Risk of Electric Shock

**This appliance must be secured to building structure. A restraining device kit (#153586) was provided with the unit to limit the movement of the appliance without depending on or transmitting stress to the electrical conduit. Installation instruction is in the kit.**



**This Restraining Device MUST always be connected when the Appliance is in Service. Disconnect for movement, servicing and or cleaning, then reconnect when the appliance has been returned to its normal position.**

**The appliance shall be installed using flexible conduit.**

Check the swing of the door. The hinge side can be changed by following the instructions on page 8. The door swing direction can be changed in the field after you have a new drip channel for the proofer door. Call Duke to get the new drip channel for the proofer door.

Check the door seal and make sure both doors close completely. If they do not close and seal properly, call Duke for assistance.

**Important: A minimum clearance of 6" from the top of the unit to the ceiling must be provided.**



Remove the light bulbs from the shipping container and install them in the oven and proofer before the oven is connected to the power supply. The light bulb covers can be removed by turning them counter -clockwise. Make sure the gasket is in place when replacing the covers. If you replace the light bulbs, make sure they are the correct voltage and a maximum rating of 40 watts. Contact Duke Manufacturing Service for long life replacement bulbs.

Fill the proofer water pan about half full of clean water. Put the wire racks in the oven and proofer.

Have a qualified service technician or electrician connect the oven to the power supply.

- Turn the oven and proofer power switches to the ON position.
- Set the oven thermostat at 350° F, the proofer thermostat at 105° F, and the proofer humidity at #3.
- All of the indicator lights should be on.
- Check to make sure that the oven and proofer fans are turning and the lights are on.
- Open the oven door. The oven fan should stop. Close the door to continue.
- Set both timers to 20 minutes and check to make sure they time down and the buzzers work.

**NOTE: When using timer for less than 10 minutes, you must turn the timer knob past 10 then set time.**


If there are any problems, call the service department at Duke for assistance before you call a service agency. If the problem is an operator or procedural error you will be liable for the service charges.

Allow the oven and proofer to pre-heat for at least 30 minutes.

Your Duke Proofer Oven is now ready to operate.



## Phase Change Wire Diagrams

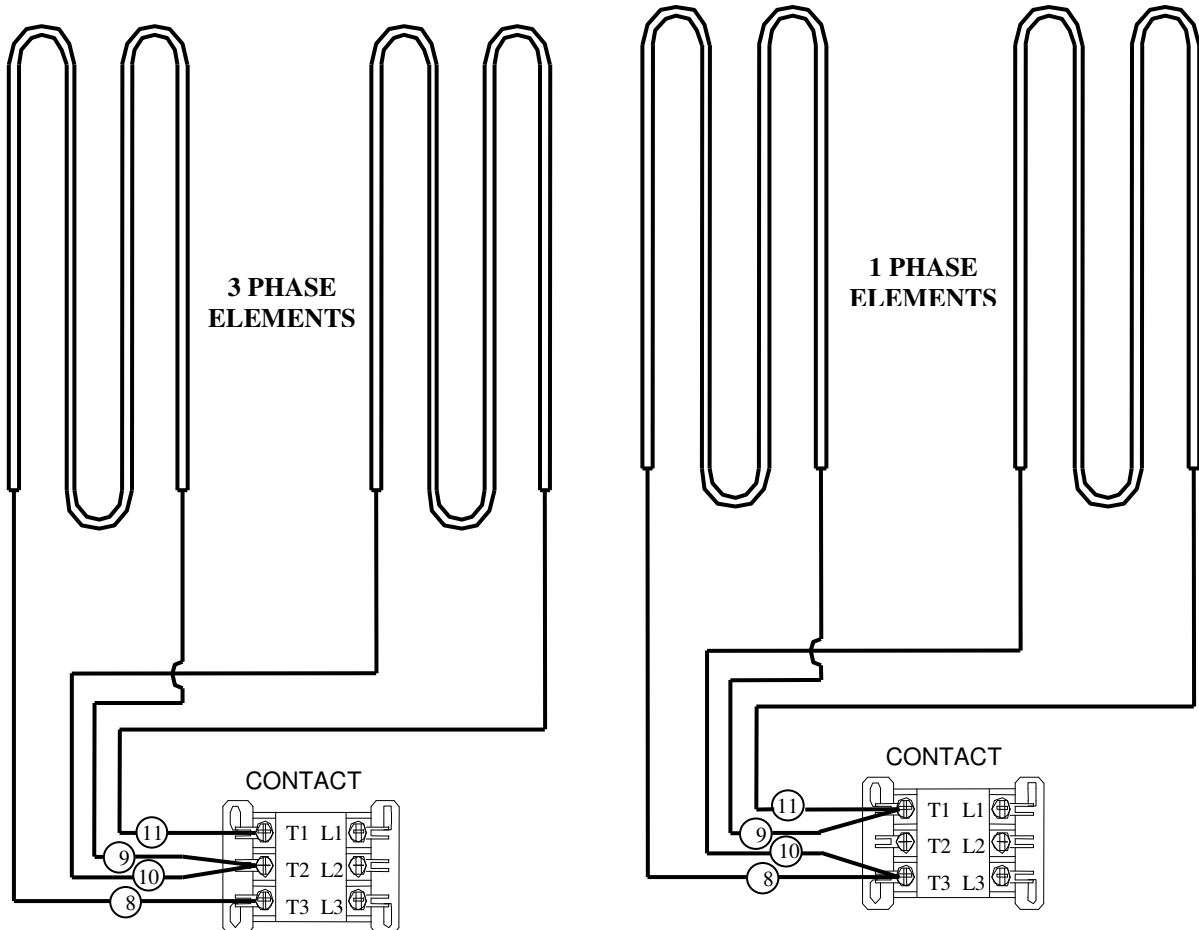**!! DANGER !!**

A qualified service technician must complete this procedure. Access to electrical parts is hazardous and could cause serious injury or death.

1. Disconnect the oven from the power supply.
2. Remove the access panel on the right side below the oven.
3. Locate the contactor on the rear control compartment surface.
4. Change the location of the heat element wires on the contactor to match the appropriate diagram above.
5. Replace the access panel and connect the power supply.
6. Check the oven and proofer for proper heating, current draw, and voltage.


## Door Adjustments & Gasket Maintenance

### Reversing Oven Door Swing Direction

#### NOTE

If you reverse the Proofer door you must have the reverse drip channel for the bottom of the door. Call Duke at 800-735-3853 to order the drip channel before you reverse the door swing.

1. Remove cover from hinges to expose the screws that hold the hinge to the front of the oven.
2. Remove the hinge screws and door from the oven.
3. Remove the door handle screws and flip the door handle over and replace it on the door.
4. Remove the six screws on the front of the oven to expose the hinge screw holes for the other swing direction.
5. Use the six screws to fill the unused hinge screw holes on the front of the oven.
6. Remove the latch strike plate from the front of the oven and move it to the other side. Use the screws from the other side to fill the screw holes that are no longer used.
7. Position the door on the front of the oven and tighten the hinge screws. Make sure the door is level with the oven body before the screws are tightened permanently.
8. Adjust the door gasket seal. See page 7 for instructions

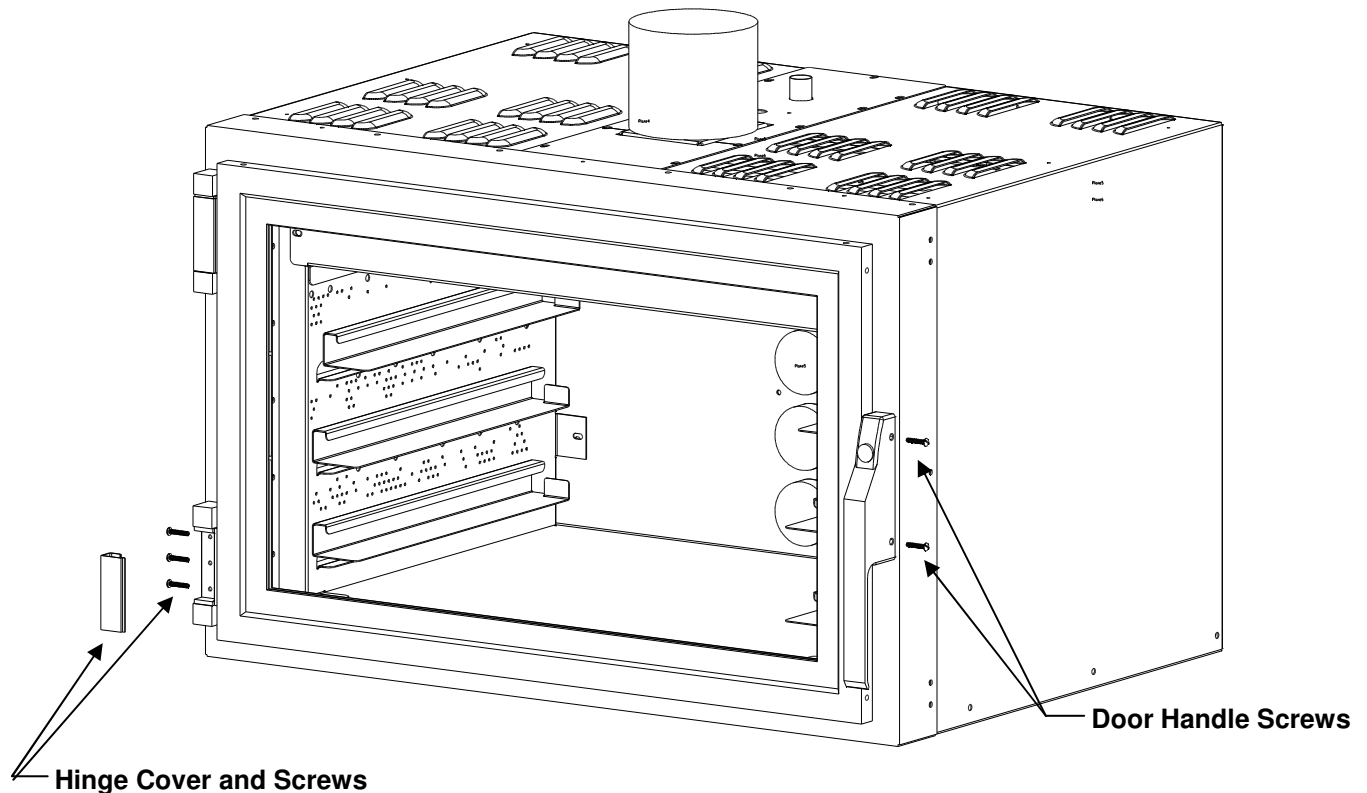





## Door Adjustments & Gasket Maintenance

### Proofer Drip Channel Reversal

The proofer door has a sloped drip channel on the bottom that directs any water that drips down the door into the water pan below the door. When the door swing is reversed this drip channel must be replaced with a new channel that has the slope in the proper direction. Contact Duke Manufacturing Service for a new drip channel before changing door swing direction.

1. Follow the directions for removing the door on the last page. When the door is off you can then replace the drip channel.
2. Remove the screws that hold the drip channel on and remove the drip channel. Use the same screws to fill the empty holes after the drip channel is off.
3. Locate the new drip channel on the other end of the door. Make sure that the slope is directed to the hinge side of the door.
4. Fasten the drip channel to the door with the self tapping screws provided with the new drip channel.
5. Follow the directions for mounting the door on page 5.

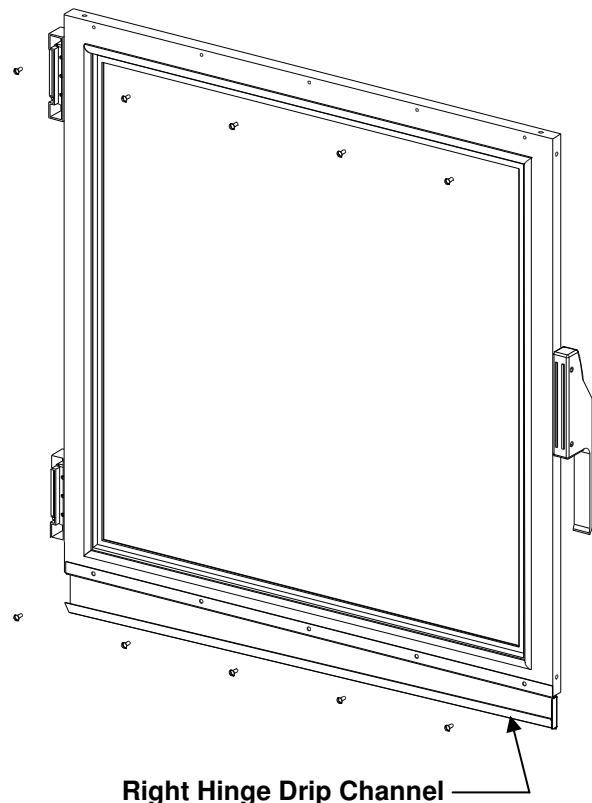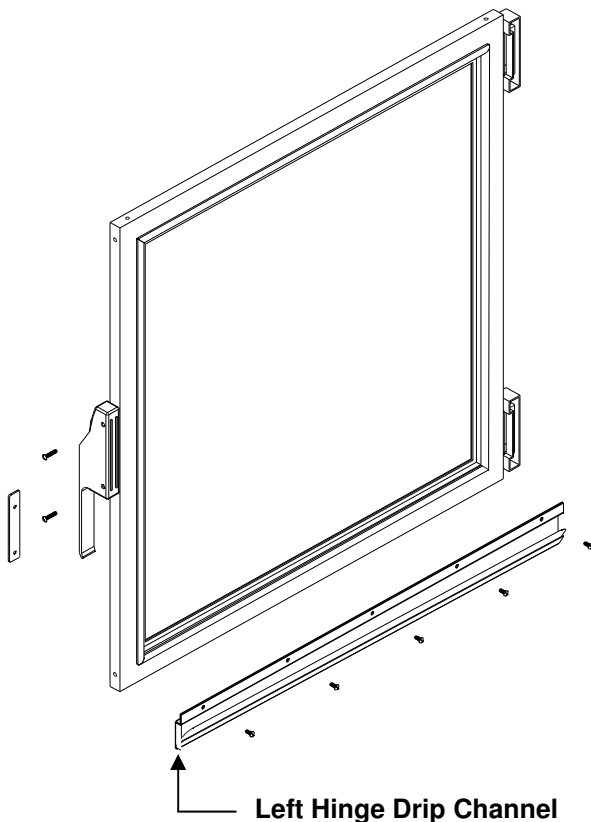


## Door Adjustments & Gasket Maintenance

### Door Gasket Leak Adjustments

The doors should be checked for leaks every three months. The adjustment can be made by following the instructions below. If the door gasket is damaged, or compressed permanently, it should be replaced. Call Duke Manufacturing Co. at 800-735-3853 to order a new gasket before making adjustments.

1. With the door closed, remove the hinge covers with a screwdriver and loosen the six screws that hold the hinges to the door.
2. Adjust the door position by moving the door frame in or out to seal any gaps between the gasket and the oven front. Be careful not to compress the gasket too much, it will cause the door to bind up on the hinge side.
3. When the door is positioned, tighten the hinge screws.
4. Loosen the two screws that hold the door handle in place.
5. Adjust the door position by moving
- the door frame in or out to seal any gaps between the gasket and oven front.
6. When the door is positioned, tighten the door handle screws.
7. To check the adjustment, close the door with a dollar bill between the gasket and front of the oven. You should feel resistance when you try to pull the dollar bill out with the door closed. Do this check in several places and readjust the door if necessary.

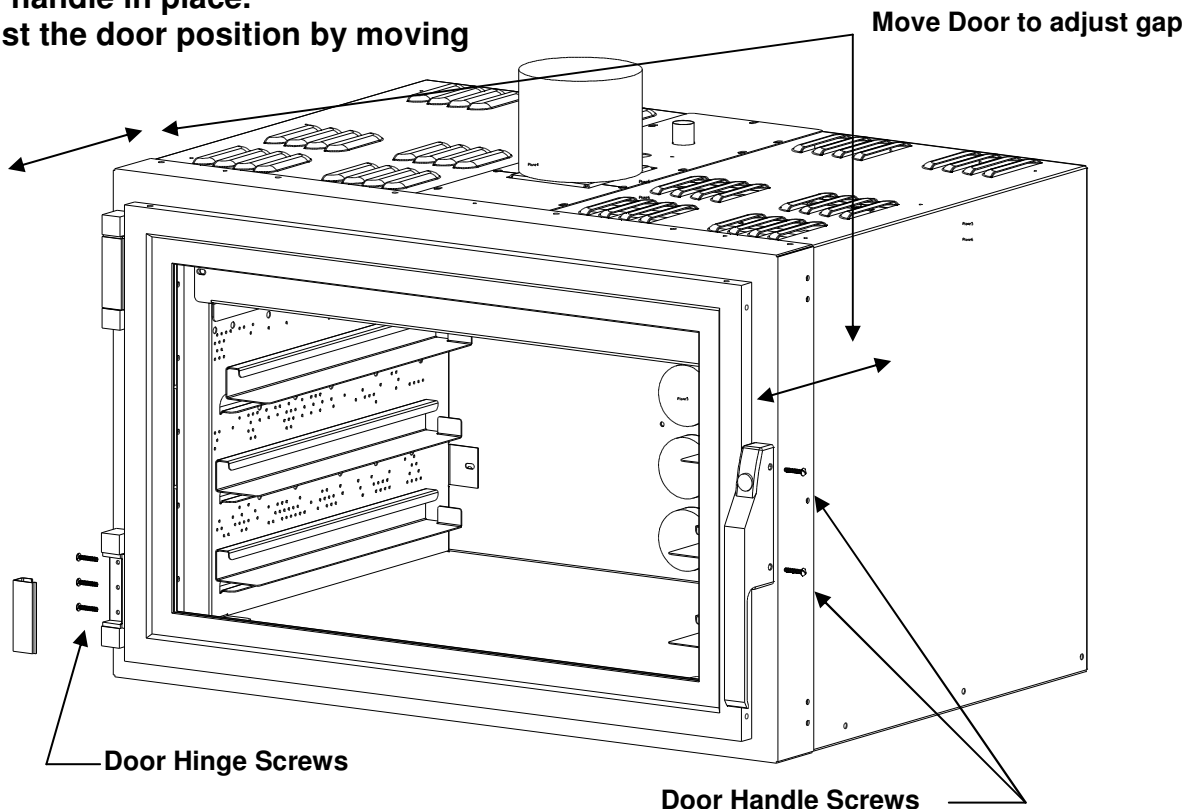


## **Door Adjustments & Gasket Maintenance**

### **NOTE**

**If the door gasket is damaged or overly compressed, it should be replaced.  
Call Duke Manufacturing Co. for a new gasket.**

### **Gasket Replacement**

- 1. Remove the old gasket by pulling it out of the groove in the door frame.**
- 2. Clean the groove with a screwdriver or other flat-bladed tool to remove any dirt or gasket pieces.**
- 3. Press the new gasket into the groove. Make sure it is fully seated**
- 4. Check the door adjustment to make sure there are not any leaks. Also check that the new gasket is not compressed too much, making the door hard to close.**

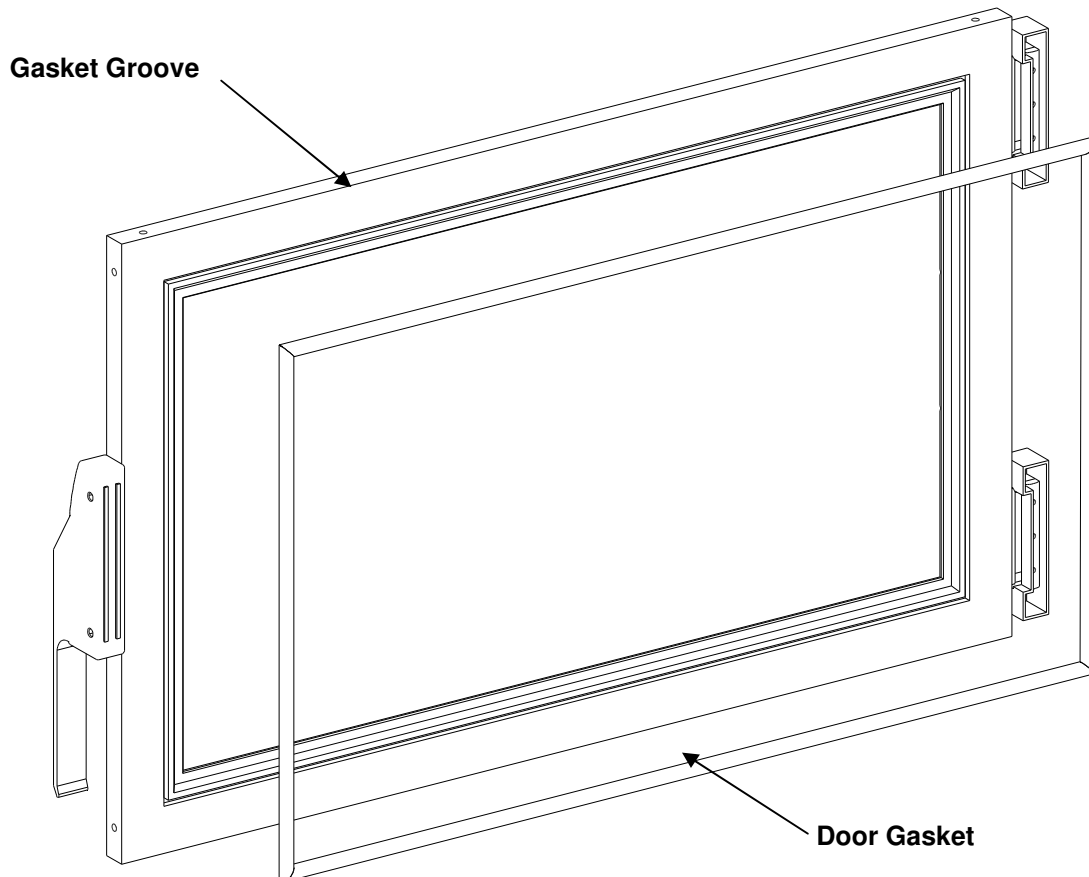

## OPERATING INSTRUCTIONS

Proofer Operation


Make sure the humidity pan has fresh clean water in it. Fill it with warm water to get the best performance. A regular check of the water level is recommended during operation. Add water as required.

Turn the proofer power switch on and set the proofer heat to the desired temperature. A good starting temperature is 105° F. The light above the heat thermostat will be on until the proofer has heated to the set temperature. You may need to adjust this temperature depending on your results. Do not turn on the proofer humidity at this time.

After the proofer has been heating for 20 minutes, turn the humidity switch to a setting of #3 or 4. You may need to adjust this setting depending on your results. When a light fog appears on the door glass the proofer is ready to load with dough. The humidity setting is too high if water is running down the door glass. If the door glass does not fog then the humidity setting is too low.

Load the proofer with bread dough and set the timer for 50 - 60 minutes. You may need to adjust the time depending on the type of dough and your results. When it rises to 75 - 80 % of it's final size, it is ready to bake. Since the proofer can hold more pans of bread than the oven can bake, stagger the loading in increments of the oven bake time. This will prevent over proofing of the bread remaining in the proofer after the first load is moved to the oven.

If there is excessive humidity on the door glass it is probably caused by a humidity setting that is too high or by having the humidity on when there is no dough loaded in the proofer. Turn the proofer off and remove the bottom panel. Remove excess water that has accumulated in the bottom of the proofer.

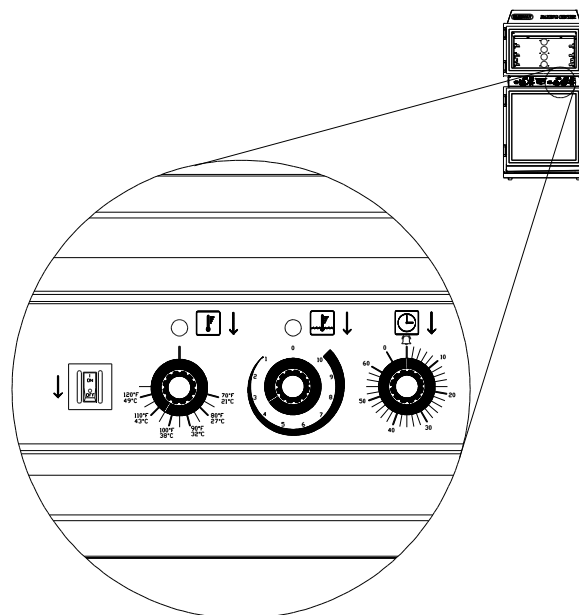

**DO NOT...**

- ***Run the proofer humidity without a load of dough.***  
*It is OK to leave the proofer heat on to maintain the temperature, but turn the humidity off if the proofer is empty.*
- ***Let the dough dry out while it is thawing.***  
*Dough that is too dry will not fully rise in the proofer and may crack.*
- ***Over-proof the dough***  
*Excessive proofing will cause the bread to collapse after it has been baked. Make sure to adjust the proofing time to prevent over-proofing.*
- ***Under-proof the dough***  
*If the bread is under-proofed it will not bake to the proper finished size and will have a dense cell structure.*
- ***Proof frozen dough***  
*Make sure the dough is thawed properly before loading it into the proofer. The dough should be soft and moist with the center thawed.*

**DO...**

- ***Watch the proofing process carefully and make adjustments if necessary.***



## OPERATING INSTRUCTIONS

Oven Operation

Turn the oven on and set the temperature to 350° F for bread and for Deli rolls. If this is done right after the proofer is loaded with the first load, the oven will be ready to bake when the first load is ready from the proofer.

The oven preheat time should be from 20 to 30 minutes. The oven door should be closed, except during loading and unloading. Load the oven quickly to reduce heat loss.

Load the oven with 6 pans of bread and set the bake timer. The bake time can be adjusted to get the desired color of the baked bread.

If the baking results are uneven or too dark, reduce the temperature and extend the bake time.


If the bread is too dark, reduce the bake time. If the bake time is reduced and the

bread is still too dark then reduce the temperature 15° F and try baking for a longer period of time. The same procedure can be used to bake Deli rolls.

If you are baking partial loads try to center the pans in the oven and start loading the oven starting at the bottom shelf and working up to the top.

Cookies are baked at 325° F and are loaded in the oven the same way as bread and deli rolls.

Keep in mind that opening the oven door allows heat to escape. If the door is left open too long it could affect the performance of the oven. Under normal conditions of loading the oven this will not be a problem.

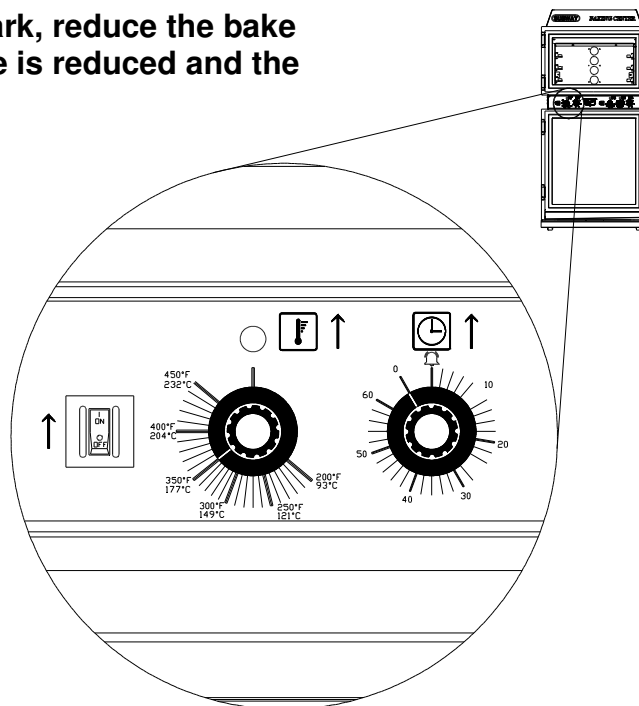

**Oven and Proofer Temperature Check**

If the oven or proofer temperature calibration seems to be wrong, it can be checked before a service call is made. It is important to follow the correct procedure to get an accurate reading. If the calibration is off it is recommended that you first call Duke Manufacturing Co. and talk to the service department before you schedule a service call. Calling Duke first can save you time and money by eliminating other problems before a service call is made.

The most important concern with temperature measurement is the accuracy of the thermometer and the location in the oven cavity. Duke recommends an electronic temperature meter with a wire thermocouple.

1. Place the thermocouple in the exact center of the oven cavity. It can be fastened to the center of the middle wire shelf.
2. Start the oven and set the temperature control for 350° follow the oven to pre-heat for at least 45 minutes.
3. While watching the heat light on the control panel, note the maximum and minimum temperatures through several cycles.
4. The average temperature of several cycles is the calibration temperature. It is normal for this temperature to have a variance of +/- 10° F.
5. The same steps can be used to check the proofer temperature. The temperature control should be set for 105° F and the normal variance is +/- 5° F.



## OVEN AND PROOFER TROUBLESHOOTING

| Problem  | Yes   | No  |
|--|---|---|
| <b>1. Oven does not heat with oven switch in the ON position and Oven Temperature not set at 0°.</b><br><br>a. Are oven lights on?<br><br>b. Does Oven Fan work?<br><br>c. Does Proofer work?<br><br>d. Is Oven Door Securely closed?<br><br>e. Is Supply Circuit Breaker tripped?<br><br>f. Is Oven Breaker Switch tripped?<br><br>g. Does oven work? | Observe Oven Fan. Go to b.<br><br>Call Duke Service.<br><br>Ensure Oven Door is Closed. Go to d.<br><br>Call Duke Service.<br><br>Reset Circuit Breaker. Try oven again. Go to g.<br><br>Reset Oven Breaker Switch. Go to g.<br><br>Troubleshooting complete. | Check Proofer Operation. Go to c.<br><br>Check Proofer Operation. Go to c.<br><br>Check Supply Circuit Breaker. Go to e.<br><br>Close Door securely. Go to g.<br><br>Check Fuses on Control Panel. Go to e.<br><br>Call Duke Service.<br><br>Call Duke Service. |
| <b>2. Proofer does not heat with Proofer Switch in the ON position Proofer</b><br><br>a. Are Proofer lights on?<br><br>b. Does Proofer Fan work?<br><br>c. Does Oven work?<br><br>d. Is Supply Circuit Breaker tripped?<br><br>e. Is Proofer Breaker Switch tripped?<br><br>f. Does oven work?   | Observe Proofer Fan. Go to b.<br><br>Call Duke Service.<br><br>Call Service Technician.<br><br>Reset Circuit Breaker. Try Proofer again. Go to f.<br><br>Reset Proofer Breaker Switch. Go to f.<br><br>Troubleshooting complete.                              | Check Oven Operation. Go to c.<br><br>Check Oven Operation. Go to c.<br><br>Check Supply Circuit Breaker. Go to d.<br><br>Check Fuses on Control Panel. Go to e.<br><br>Call Duke Service.<br><br>Call Duke Service.  |





**OVEN AND PROOFER TROUBLESHOOTING**

| <b>Problem</b>  | <b>Yes</b>   | <b>No</b>   |
|---|--|---|
| <b>3. Oven/Proofer lights not working.</b><br><br>a. Is more than one light not working?<br><br>b. Do lights work?  | Replace inoperative light bulbs and recheck. Go to b.<br><br>End of troubleshooting.   | Call Duke Service.<br><br>Call Duke Service.  |
| <b>4. Proofer Humidity not working/insufficient with Humidity Control not set to Off.</b><br><br>a. Does proofer humidity appear to be working?<br><br>b. Does proofer humidity appear to be working? | Adjust Humidity to next higher setting. Wait 15 minutes. Go to b.<br><br>Adjust humidity to appropriate setting. End of troubleshooting. | Adjust humidity to maximum setting. Wait 15 minutes. Go to b.<br><br>Call Duke Service. |
| <b>5. Proofer Humidity too high.</b><br><br>a. Is Proofer Humidity Control set properly?<br><br>b. Is proofer humidity working properly?  | Remove proofer floor and remove accumulated water. Go to b.<br><br>End of troubleshooting.   | Adjust humidity control to proper level. Go to b.<br><br>Call Duke Service.             |



**DUKE MANUFACTURING CO.**  
 2305 N. Broadway  
 St. Louis, MO 62025


**Toll Free 1-800-735-DUKE (3853)**  
**1-314-231-1130**  
**Fax 1-314-231-5074**

**<http://www.dukemfg.com>**



## CLEANING AND MAINTENANCE

## DAILY

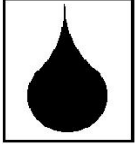

## CLEANING INSTRUCTIONS

1. Wipe down the interior and exterior of the proofer oven with warm water and mild detergent using a soft cloth.
2. Clean proofer water pan using mild detergent and warm water. Ensure all soap is rinsed from the oven and proofer surfaces and water pan to avoid flavor transfer to the bread.
3. Open the proofer door and run the proofer with the heat on for at least 30 minutes to dry it out.
4. Turn the proofer off, wait 10 minutes, and remove the bottom fan cover panel. Wipe up any excess water that has accumulated in the bottom of the proofer.

**!Caution!**

Do not use caustic cleaners, acids, ammonia products or abrasive cleaners or cloths. These can damage the stainless steel and door gaskets.

## WEEKLY

NONE

## MONTHLY

1. Check door handle screws for tightness.

## THREE MONTHS



1. Check the door gasket seal on the oven and proofer for leaks. See the section on Door Adjustments and Gasket Maintenance for help.

## SIX MONTHS


None.



DUKE PROOFER OVEN  
MODELS AHP0-6/18 & EP0-3/9  
208/240 VAC 50/60 HZ 1PH & 3PH

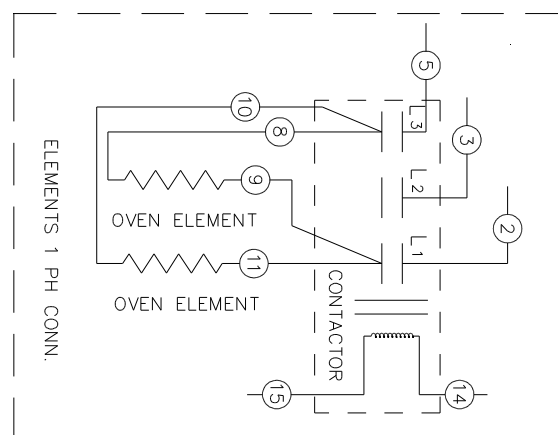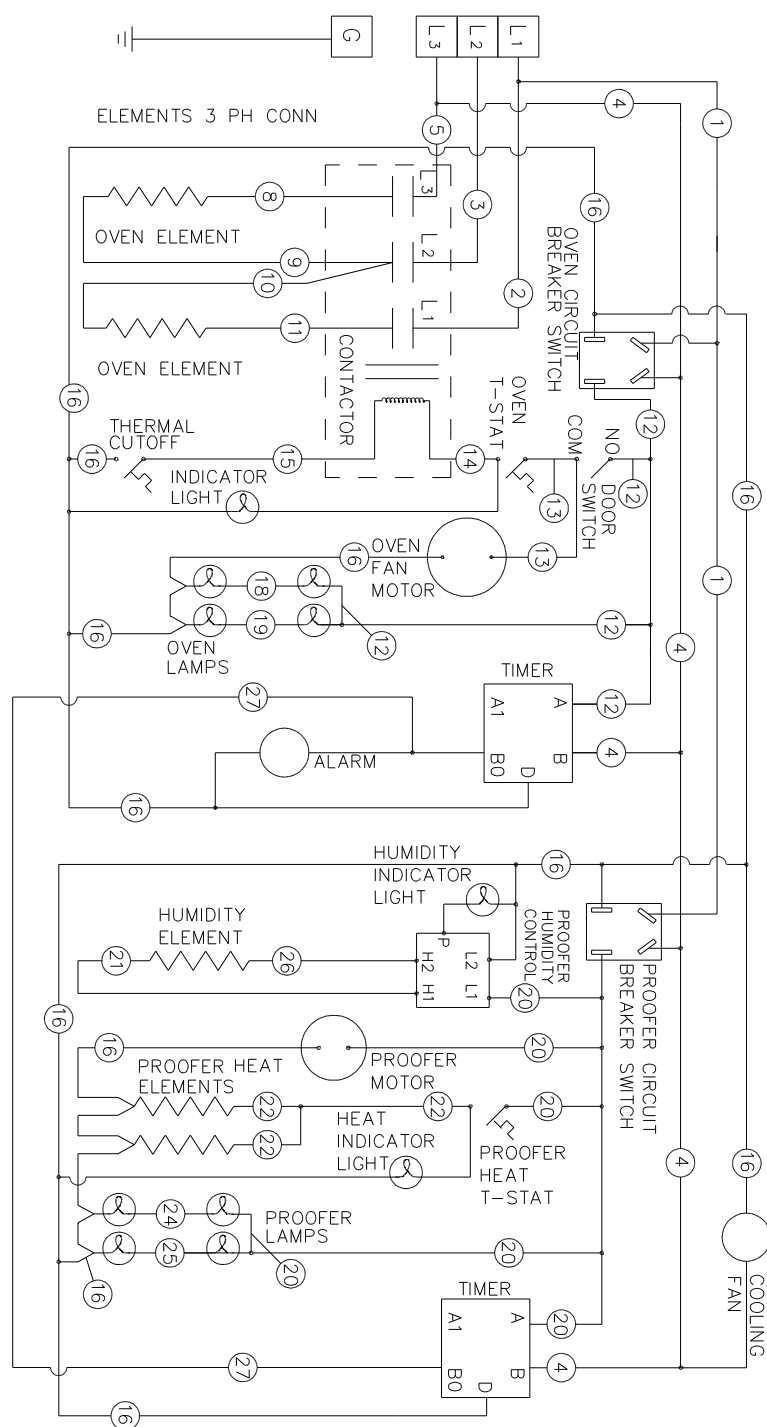


## ELECTRICAL SCHEMATICS

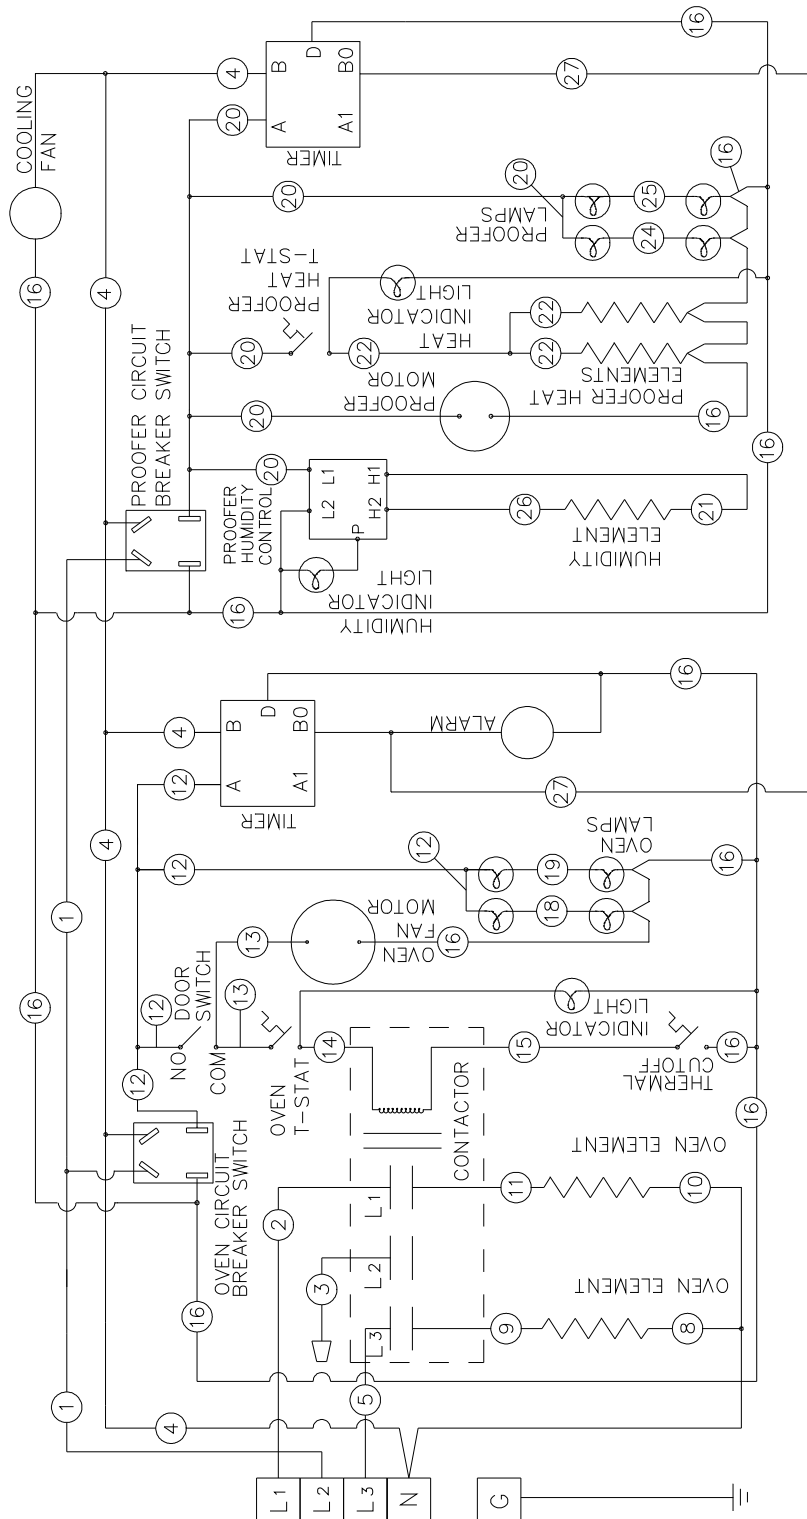


DUKE PROOFER OVEN  
MODELS AHPO-6/18 & EPO-3/9  
220/380 3PH 50/60 HZ  
240/415 3PH 50/60 HZ



## REPLACEMENT PARTS

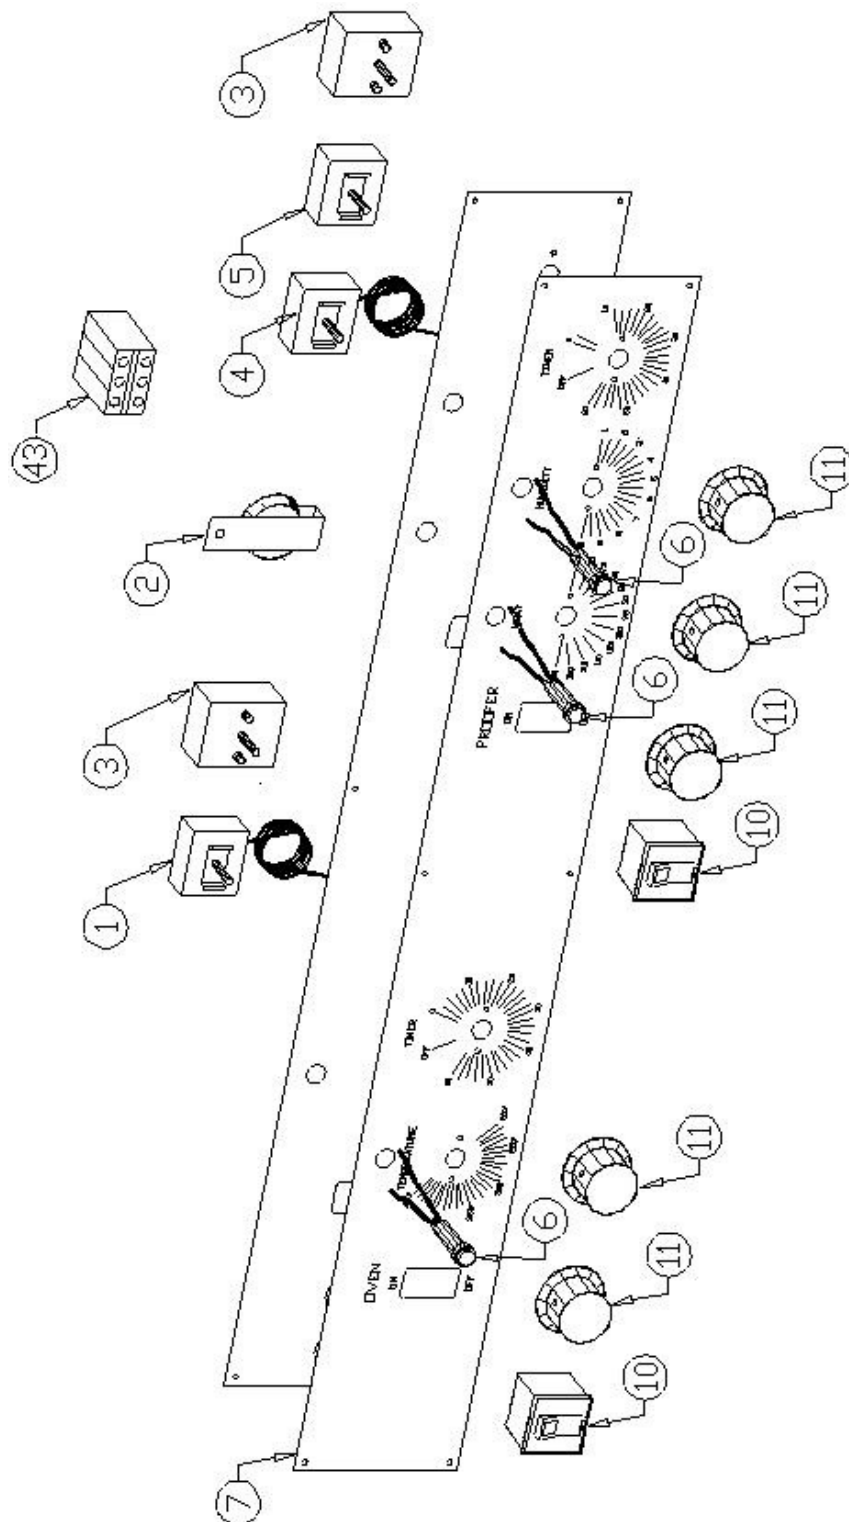

## REPLACEMENT PARTS

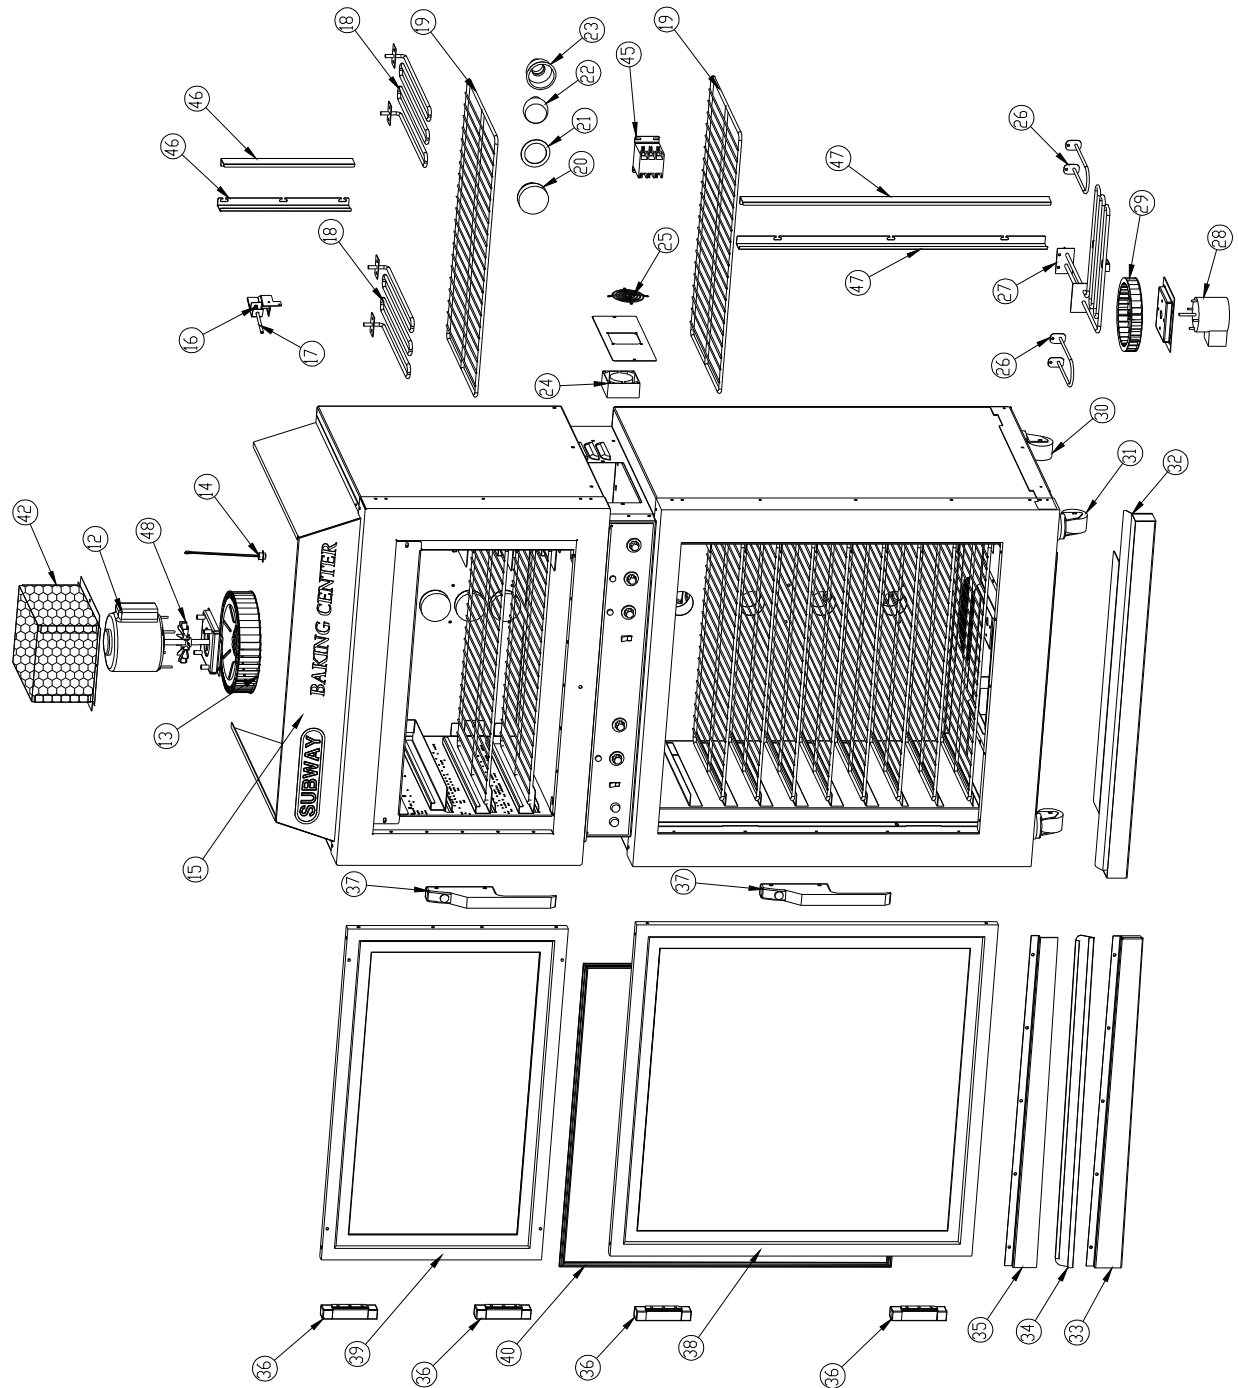

## REPLACEMENT PARTS

| <u>Item #</u> | <u>Part #</u> | <u>Description</u>                             |
|---------------|---------------|--|
| 1             | 512852        | Thermostat, Oven                               |
| 2             | 154075        | Buzzer   |
| 3             | 512972        | Timer, 60 minute, 50 Hz                        |
| 3             | 512972        | Timer, 60 minute, 60 Hz                        |
| 4             | 512850        | Thermostat, proofer                            |
| 5             | 512949        | Thermostat, humidity 208V                      |
| 5             | 512949        | Thermostat, Humidity 240V                      |
| 6             | 512068        | Light, indicator                               |
| 7             | 502191        | Mylar, control panel                           |
| 10            | 502805        | Switch, circuit breaker                        |
| 11            | 153142        | Knob   |
| 12            | 154470        | Motor Oven – 230V                              |
| 13            | 154039        | Blower Wheel, Oven                             |
| 14            | 502177        | Thermostat, high limit                         |
| 15            | 502939        | Mylar, EPO                                     |
| 16            | 512843        | Compression spring, door switch assembly       |
| 17            | 512821        | Plunger rod, door switch                       |
| 18            | 154375        | Element, 2.5 kW, oven                          |
| 19            | 154547        | Wire rack                                      |
| 20            | 156040        | Lens, Glass, Light                             |
| 21            | 156041        | Gasket, lens                                   |
| 22            | 156029        | Bulb, light, 120V, 40 Watt                     |
| 22            | 502341        | Bulb, light, 230V, 40 Watt                     |
| 23            | 502342        | Fixture, Light Assembly, 120V                  |
| 23            | 502342        | Fixture, Light Assembly, 230V                  |
| 24            | 512955        | Cooling fan                                    |
| 25            | 512956        | Fan guard                                      |
| 26            | 512895        | Element, 250 watt, 208V, proofer               |
| 26            | 512849        | Element, 250 watt, 240V, proofer               |
| 27            | 600102        | Kit, Element, 450 watt, 208V, humidity proofer |
| 27            | 600103        | Kit, Element, 450 watt, 240V, humidity proofer |
| 28            | 512872        | Motor, proofer – 208/240 volt                  |
| 29            | 154019        | Blower, forward curve, proofer                 |
| 30            | 512836        | Castor, swivel                                 |
| 31            | 512835        | Castor, locking w/brake                        |
| 32            | 512935        | Drip pan                                       |
| 33            | 155977        | Housing, drip edge – left hinged door          |
| 33            | 155979        | Housing, drip edge – right hinged door         |
| 34            | 155981        | Gutter, drip edge                              |
| 35            | 155976        | Channel, drip edge – left hinged door          |
| 35            | 155978        | Channel, drip edge – right hinged door         |
| 36            | 512817        | Hinge, door                                    |
| 37            | 512905        | Handle & latch assembly                        |
| 38            | 512909        | Proofer door assembly                          |
| 39            | 512910        | Oven door assembly                             |
| 40            | 512914        | Gasket, proofer door                           |
| 41            | 512913        | Gasket, oven door                              |
| 42            | 502180        | Cover, Motor                                   |
| 43            | 512480        | Terminal Block, 3 Pole                         |
| 43            | 512941        | Terminal Block, 4 Pole                         |
| 44            | 502195        | Cover Access                                   |
| 45            | 512833        | Contactor, 30A                                 |
| 46            | 502744        | Guard, Oven Light                              |
| 47            | 502745        | Guard, Proofer Light                           |
| 48            | 502338        | Fan, Motor                                     |



